


AquaBrick™ Spigot Assembly

Plastic Lock Nut

AquaBrick™ Cap

Spigot Unit

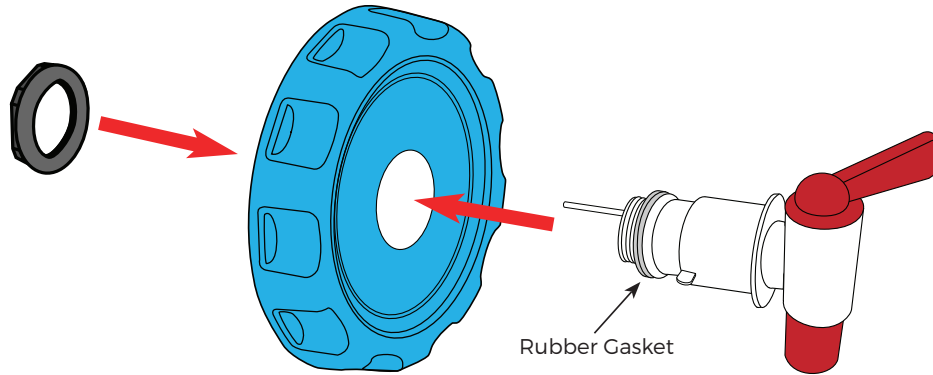

DIRECTIONS:

1. Insert threaded end of Spigot Unit through the hole in the cap
2. Rubber Gasket should be on top of the cap
3. Twist the Plastic Lock Nut on to the threads until snug
4. Finish tightening the assembly by holding the Plastic Lock Nut while turning the Spigot clockwise until it will turn no further

View other water purification products at: www.saganlife.com

Questions: info@saganlife.com